MID-WEST [®]	STANDARD OPERATING PROCEDURE	ISSUE DATE:	REV:	PROCEDURE No.			
INSTRUMENT		4-16-09	O.R.	116-DRAFT			
SUBJECT: DOWNSCALE Accuracy Check for Model 116 Liquid Level Gauge							

Reference - The following procedure is based on the principles and recommendations of ASME B40.100.

Equipment – The instrument used to check the accuracy of a model 116 should have an error tolerance at least 4 times smaller than the error tolerance of the model 116. For example: +/- 1%, 0-100" H₂O model 116 has an error tolerance of +/- 1" H₂O. The instrument used to check this model 116 should have an error tolerance of not more than +/- 0.25" H₂O.

An instrument such as the Meriam model 200-Gl0030 (0-30 PSI (0-832" H_2 0)) or equivalent is suitable for checking the entire range of Mid-West Instrument model 116's used for cryogenic level measurement.

Environment - Accuracy checks should be performed in a controlled environment at a temperature of 73 °F +/- 2 °F (23 °C +/- 1 °C).

Procedure -

- 1. Vent the high and low side of the model 116 to atmosphere creating zero ΔP on the model 116.
- Connect a pressure source and test instrument to the high side of the model 116 with an <u>atmospheric reference</u> pressure on the low side.
 <u>CAUTION:</u> The fluid in the pressure source must be compatible with the process fluid.
- 3. Cycle the model 116 one time by applying full scale pressure to the high side of the model 116 then vent the pressure to zero.
- 4. Verify that the pointer is on zero. If not, zero the pointer using the micro adjust feature per the IOM.
- 5.Apply full scale pressure to the test instrument. Lightly tap the model 116 bezel then record the reading of the model 116 and the test instrument.
- 6. Decrease the pressure in the test instrument to a major pressure graduation between 70% and 80% of full scale. (*i.e. for a 0-150*" H₂O range decrease the pressure to 110" H₂O not 112.5" H₂O) Lightly tap the model 116 bezel then record the reading of the model 116 and the test instrument.
- 7. Decrease the pressure in the test instrument to a major pressure graduation between 45% and 55% of full scale. Lightly tap the model 116 bezel then record the reading of the model 116 and the test instrument.
- 8. Decrease the pressure in the test instrument to a major pressure graduation between 20% and 30% of full scale. Lightly tap the model 116 bezel then record the reading of the model 116 and the test instrument.
- 9. Decrease the pressure in the test instrument to zero. Lightly tap the model 116 bezel then record the reading of the model 116 and the test instrument.

Note- For gauges with non-linear level dials, contact Mid-West Instrument for test procedures and test points.

Accuracy Calculation - The accuracy of the model 116 can be calculated as follows:

(Test Instrument Reading – model 116 reading) X 100 = % Accuracy Model 116 full scale range		Example: (110 – 109) 	_ X 100 = 0.667%
---	--	-----------------------------	------------------

- The model 116 gauge has an accuracy of +/- 1% of full scale.
- The model 116 with single switch has an accuracy of +/- 2% of full scale

Contact Mid-West Instrument should the readings fall outside the permissible error tolerance.

F:\USERFILE\Quality\Procedures\106_116\116-XXX DOWNSCALE accuracy check Final.doc